


OPENING AND CLOSING THE HOUSING

FANTASEA
line

To Opening The Housing:

1. Observe that the locking mechanism has a single lock release tab.
2. Push down the Lock Release Tab with one finger and at the same time pull Buckle Part B upward using the rounded edge and then open Buckle Part A allowing the buckle latch to swing free for opening.

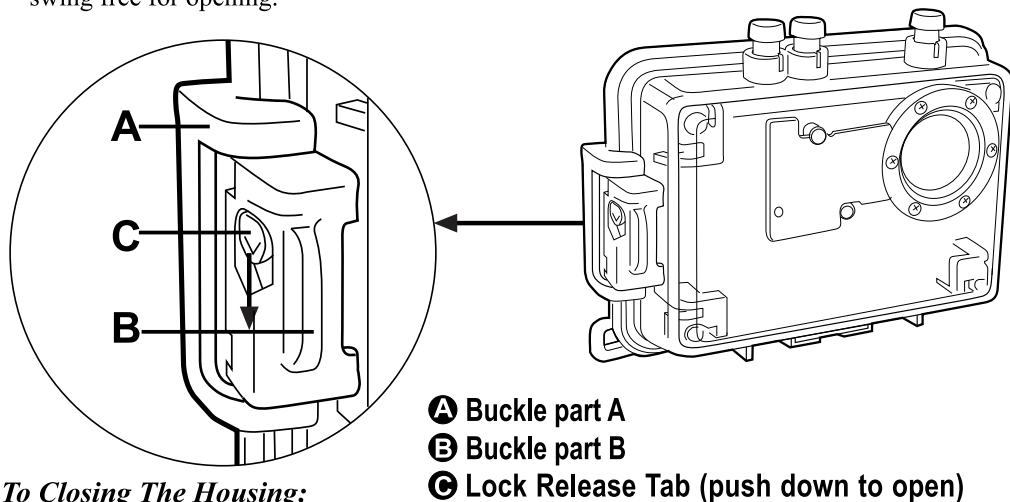

To Closing The Housing:

1. Bring the two halves of the housing together with one hand [squeezing your thumb on one side and your other fingers on the other until the two halves touch and hold securely in that position. With the other hand, attach the flange to the body of the camera and gently lower the rounded latch until it snaps into place.
2. Never force the housing closed; if it does not close easily, please check to make sure that the camera is well seated and that the lens is sitting properly in the port area and not distorting the rubber seat.
3. It is most important to check to make sure the rectangular rubber gasket [blue or black] is seated correctly in its niche [not raised at any point and sitting in its groove] and that there is no sand, dirt or any other foreign object on its surface. Do not use any lubricant whatsoever on this gasket—especially silicon grease which will distort it. Make sure that the black wrist lanyard is not jammed into the housing during the closing procedure.
4. **Always take the first dive without your camera in the housing just to make sure there is no leakage from damage to the housing.** During the dive — especially at the beginning of descent — take special care to look at the housing to make sure no bubbles are escaping from it and that no water is entering. Generally, if there is a problem with the seal, you will discover it in the first seconds of the dive.